






contact us:

one year hassle free guarantee. any quesyions, please contact by email: support@vanskytek.com.



Specifications

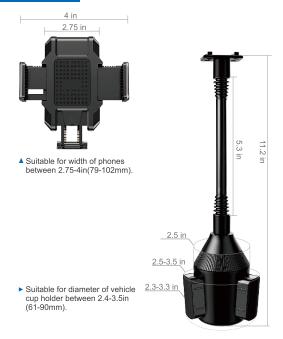

Installation steps

1: Air vent mount



2: Car cup holder









- Align the top of gooseneck with the back of the phone holder, (as the photo below) then move it up to tight the phone holder. (NOTE: when you hear the "ti-tak", that means you install it correctly).
- ② Put the base in your vehicle cup holder.
- ③ Twist the knob on the base to fit the cup holder (clockwise to tight, anticlockwise to loosen)
- O Click the button behind the phone holder to expand the clip to adjust your phone can fix in the phone holder. Adjust the flexible gooseneck or phone holder with optimum driving view as you like.